


SLOPED LADDER EXTENSIONS

DWG. # LDW21224MB-XT

NOTES:

1. LADDER AND BRACKETS SHIP LOOSE. FIELD INSTALLATION BY OTHERS IS REQUIRED.
2. REFER TO RIGGING PACK FOR LADDER AND PLATFORM MOUNTING INSTRUCTIONS.
3. RIG LADDER BEFORE INSTALLING PIPEWORK TO UNIT.

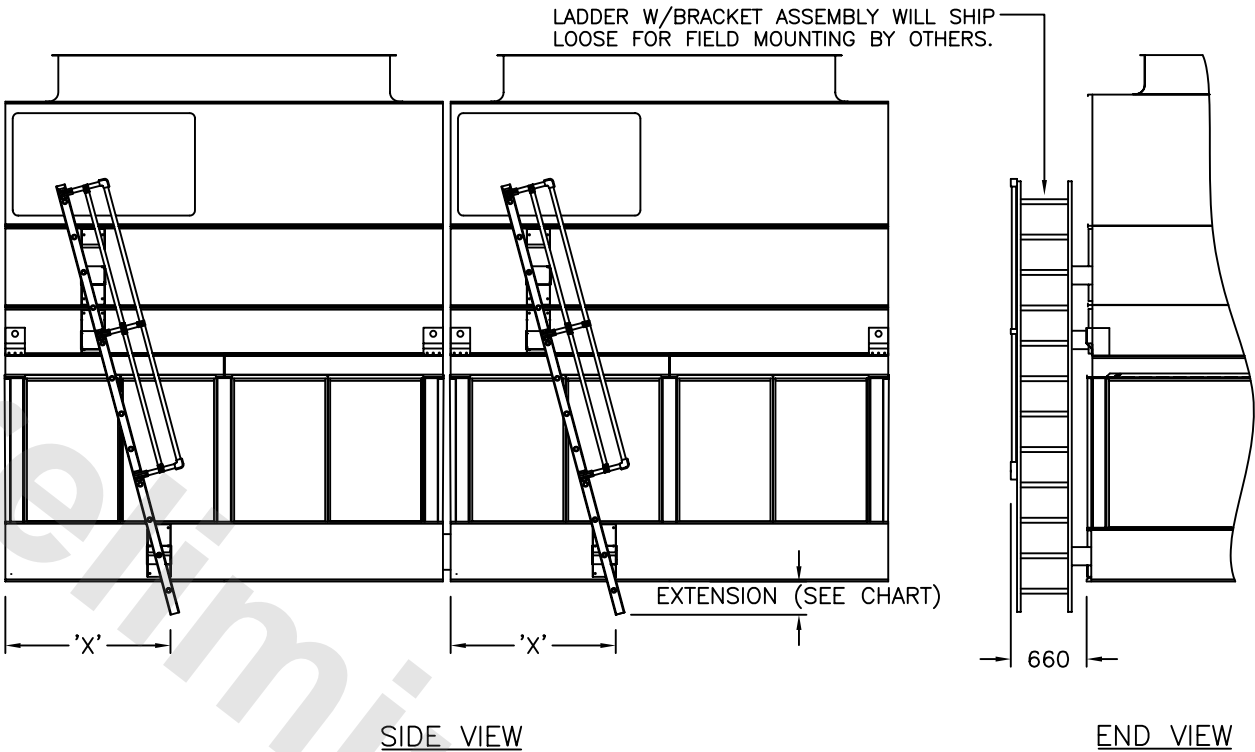

| MODEL NUMBER | MODEL NUMBER | 305mm EXTENSION | 610mm EXTENSION | 914mm EXTENSION |
|---------------|----------------------------|-----------------|-----------------|-----------------|
| COOLER | CONDENSER | 'X' | 'X' | 'X' |
| ATW 286-3K,3L | — | 1381 | 1464 | 1546 |
| ATW 286-4L,4M | ATC 858B,913B,949B | 1432 | 1515 | 1597 |
| ATW 286-5L,5M | ATC 1007B,1047B,1078B | 1508 | 1591 | 1673 |
| ATW 286-6M,6N | ATC 980B,1085B,1118B,1167B | 1568 | 1651 | 1734 |

CUSTOMER INSTALLATION NOTES:

- a. REMOVE LADDER BRACKET MOUNTING BOLTS (1) FROM LADDER MOUNTING CHANNELS (2) ON PAN AND CASING SECTIONS.
- b. LOOSEN, BUT DO NOT REMOVE, LADDER BRACKET AND ASSY. BOLTS (3).
- c. TO ASSEMBLE, SLIDE LADDER BRACKET ASSY. (4) OVER LADDER MOUNTING CHANNELS (2) LOCATED ON PAN AND CASING (DO NOT REMOVE LADDER BRACKET ASSY. (4) FROM LADDER.)
- d. ALIGN HOLES AND REINSTALL LADDER BRACKET MOUNTING BOLTS (1) THROUGH LADDER BRACKET ASSY. (4) AND LADDER MOUNTING CHANNELS (2).
- e. TIGHTEN ALL BOLTS.
- f. TIGHTEN ADJUSTING SCREW (5) IN THE ADJUSTABLE MOUNTING BRACKETS WHEN APPLICABLE.

